

Kabel	Zacisk	1XP14.5.1			Zacisk	Kabel
		Listwa lub aparat		Listwa lub aparat		
b	4	2XP14.5.1	1	K02.0	11	c1
b	7	2XP14.5.1	2	K02.0	14	c1
			3	K	A1	
b	5	2XP14.5.1	4	K	53	
b	6	2XP14.5.1	5	K	54	
	13	K1	6	1Ps	1	b1
b	1	2XP14.5.1	7	K2	24	b1
b1	2	Ft(P14.5.1)	8	F3	T1	
b1	1	Ft(P14.5.1)	9	F3	T2	
b	8	2XP14.5.1	10	K	84	
b	9	2XP14.5.1	11	K1	32	
		zacisk N	12	K	A2	
b	10	2XP14.5.1	13	K1	A2	
	A1	K2	14	1Ps	2	b1

Kabel	Zacisk	3XP14.5.1			Zacisk	Kabel
		Listwa lub aparat		Listwa lub aparat		
c2	25	XS	1	K	74	
c2	26	XS	2	K1	22	
c2	27	XS	3	2XP14.5.1	2	b
c2	62	XS	4	2XP14.5.1	3	b
	4	3XP14.5.2	5	K1	21	
			6	K2	13	
c2		XS	7	K2	14	

Kabel	Zacisk	2XP14.5.1			Zacisk	Kabel
		Listwa lub aparat		Listwa lub aparat		
b	7	1XP14.5.1	1	S4	8	
b	3	3XP14.5.1	2	S4	3	
b	4	3XP14.5.1	3	S4	4	
b	1	1XP14.5.1	4	S4	7	
b	4	1XP14.5.1	5	S3	13	
b	5	1XP14.5.1	6	S3	14	
b	2	1XP14.5.1	7	S3Q	22	
b	10	1XP14.5.1	8	H1	1	
b	11	1XP14.5.1	9	H2	1	
b	13	1XP14.5.1	10	H2	2	

Aparat	Oznaczenia	F2	K										Q			K1				F3				K2																								
	Typ lub nr schematu połączeń zewnętrznych	SCL6 B4	DILEM/40DILE DILM15/40DILE										PKZM0			DILER–22 (230V; 50Hz)				EMT6				R4–4p																								
	Nr zacisku	2	1	A1	A2	63	64	83	84	53	54	73	74					T1	T2	T3	13	14	21	22	31	32	A1	A2	A1	A2	T1	T2	21	22	A1	A2	23	24	13	14								
połączenia dokad	Mostki, złącza uziemienia																																															
połączenia dokad	Nr zacisku			3	12					10	4	5		1								6		5	2		11		13			8	9			14			7	6	7							
	Oznaczenie listwy lub aparatu		1XP14.5.1										3XP14.5.1	1XP14.5.1				3XP14.5.1	1XP14.5.1														3XP14.5.1															
	Typ przewodu												3XP14.5.1					3XP14.5.1																														
		DY 1,5																																														

UWAGA:

– obwody 24V i 230V prowadzić w osobnych kablach sterowniczych

Aparat	Oznaczenia	H1		S3		S3Q		H2		S4													
	Typ lub nr schematu połączeń zewnętrznych	M22-DL-G-X1						M22-DL-R-X0						ŁK15-2.829									
	Nr zacisku	1	2	13	14	21	22	1	2	1	2	3	4	5	6	7	8						
połączenia	Mostki, złącza uziemienia																						

Tabela elementów zmiennych

Napęd	Szafa	Odpływ	Listwy	1X...–1	1X...–2	3X...–1	3X...–2	3X...–3	3X...–4	STEROWNIK
P14.5.1	R14	=6	1XP14.5.1; 2XP14.5.1; 3XP14.5.1	K02.0–11	K02.0–14	XS–25	XS–26	XS–27	XS–62	S14
P14.5.2	R14	=18	1XP14.5.2; 2XP14.5.2; 3XP14.5.2	K02.1–11	K02.1–14	XS–28	XS–29	XS–30	3XP14.5.1–4	S14
P14.5.3	R14	=19	1XP14.5.3; 2XP14.5.3; 3XP14.5.3	K04.3–11	K04.3–14	XS–56	XS–57	XS–58	3XP14.5.2–4	S14